

Linking your WeatherLink account to your FieldClimate account


To begin pushing your Davis Weather station data to the Pessl Instruments FieldClimate platform, you will need to perform a few simple tasks.

If you have not already done so, before you start:

- Set up and configure your Davis weather station or EnviroMonitor system as directed in your Davis weather station manuals.
- Create your WeatherLink.com account.


Create and log in to your FieldClimate Account

- 1. Visit FieldClimate -> https://ng.fieldclimate.com
- 2. If you are new to FieldClimate, register. Chose a username, password. You will receive an email with instructions to activate your account.

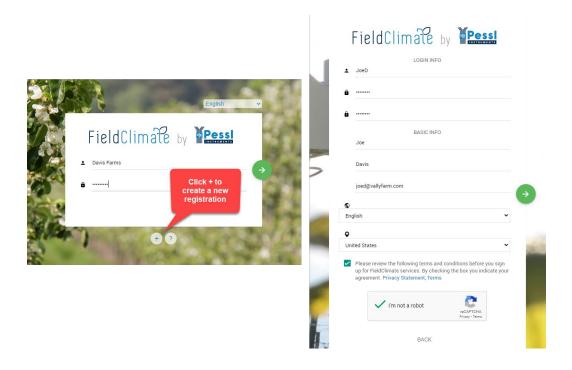


Connect your WeatherLink Account to FieldClimate

- 1. Log into your WeatherLlnk.com account.
- 2. On the left side of your dashboard, under your name, click the account icon.
- 3. Copy the API Key v2 and API Secret.

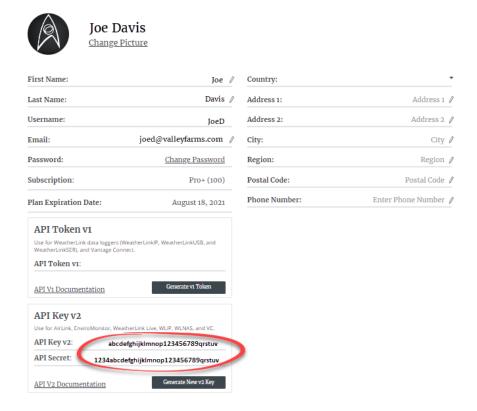


- 4. Log into FieldClimate.
- 5. Click the user icon, then click **API Services**.

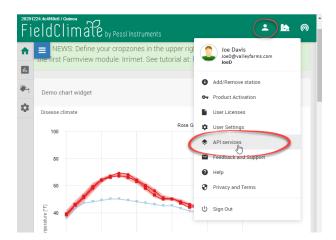


6. Select **WeatherLink** then paste the copied WeatherLink API key v2 and API Secret in the specified fields.



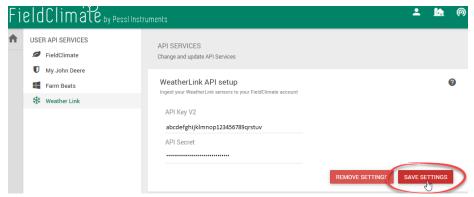


7. Click **SAVE SETTINGS**.

8. Click the user icon and then click **Product Activation**.

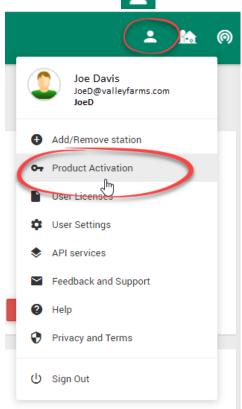


9. Enter the product key code sent to you from Davis Instruments. Click ACTIVATE PRODUCT.

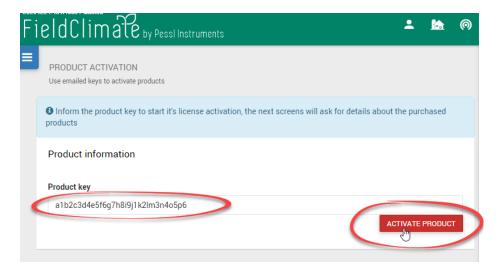

Activate your services


- 1. From the list, select the station. (WeatherLink devices start with the letter B.)
- 2. Click **ADD** to activate your service(s).

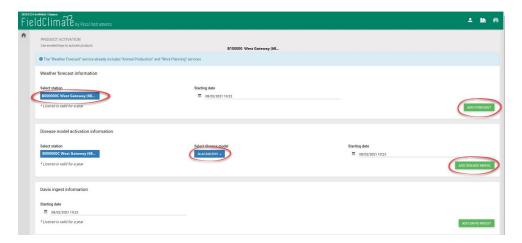

Access your service


Now, when you log into FieldClimate, your services will appear on your dashboard.

Note: Initially, data may take up to 30 minutes to appear.

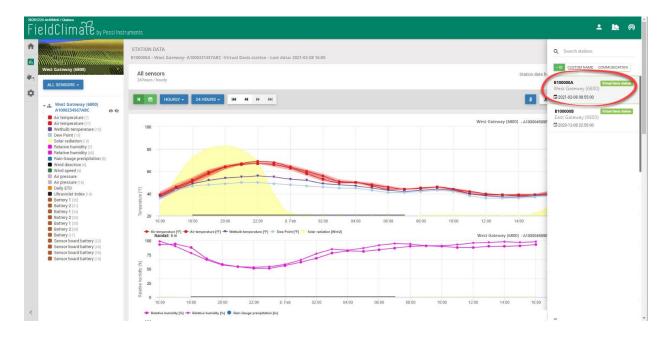

More Information

 For more information on using your FieldClimate services, refer to the Help section, or contact Pessl Tech Support.

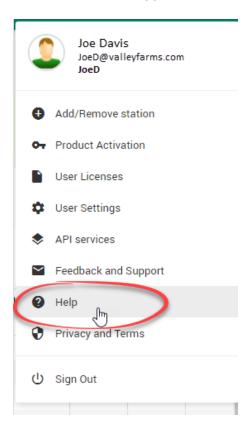

• For help with your **Davis weather station, EnviroMonitor system, or WeatherLink.com**, please contact Davis Technical Support at (510) 732-7814, M- F, 7:00 am to 5:30 pm PST; or support@davisinstruments.com.